




Assembly Instructions

Tools Needed: (2) 1/2" wrenches, 3/4" socket, & pliers.
Please read all instructions before assembling

Step 1: Attach Extension kit Assembly (D) to Base (A) with attached PTO pins. Note: (All legs should be aligned to the same "1, 2 or 3" position).

Step 2: Attach the (C) Back Rest Assembly to the frame using the enclosed 1/2-13 x 1 1/4 hex head bolts. Tighten using a 3/4" wrench.

Step 3: From the back of (A) Base, slide Release Mechanism, handle first (left to right) through channel aligning center threads with center of channel.

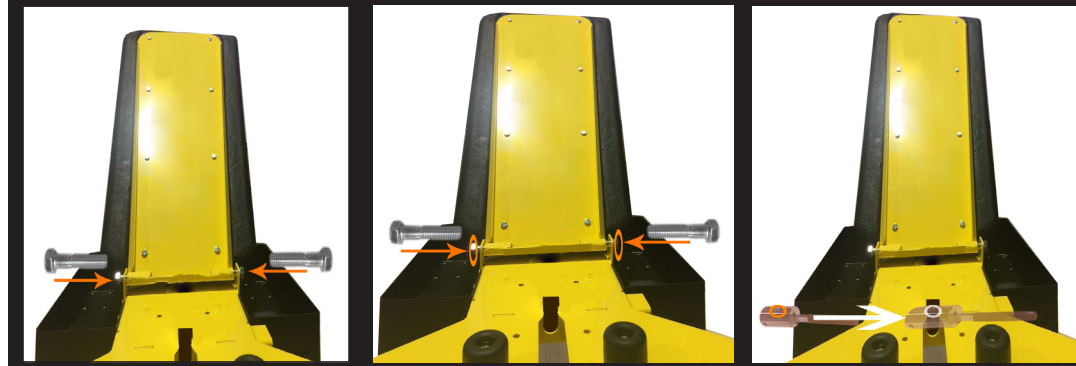

Step 4: Turning clockwise, screw gas spring into release mechanism turning 12 360 degree rotations.

Step 5: Tighten aluminum spring spacer on strut of gas spring with pliers.

Step 6: Put top of gas spring eyelet into bracket at the top of the back, slide 5/16-18 x 1 1/8 bolt through the bracket, tighten with 5/8-18 reversible lock nut using two 1/2" wrenches.



Warranty: Eidos products are covered by a limited warranty for a period of five years from date of purchase.

*Online Product Registration :

<http://www.eidosergonomics.com/product-registration.html>