

**Adjustment Instructions**

Tools Needed: Two 1/2" wrenches.

**Please read all instructions before adjusting**

**Step 1:** Using two 1/2" wrenches remove the 5/16-18 x 1 1/8" bolt located at the top of the gas spring.




**Step 2:** Loosen aluminum spring spacer on strut of gas spring .




**Step 3:** Remove aluminum spring spacer from old gas spring and if it is salvageable hand tighten onto the new gas spring.



**Step 4:** Turning clockwise, screw new gas spring into release mechanism turning 12 full rotations.

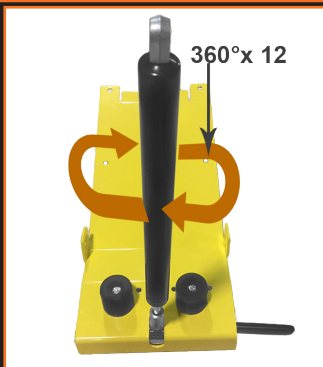

**Step 5:** Tighten aluminum spring spacer on strut of gas spring

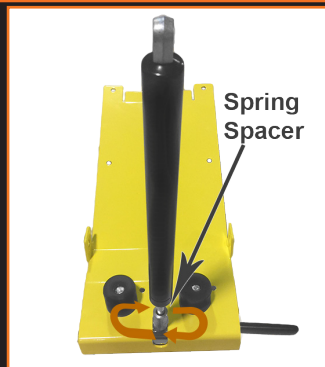

**Step 6:** Put top of gas spring eyelet into bracket at the top of the back, slide 5/16-18 x 1 1/8" bolt through the bracket, tighten with reversible lock nut using 1/2" wrenches.



**\*NOTE:** When the handle is engaged the backrest should recline with minimal effort. If your backrest does not recline do not force it, this will cause the strut to bend and will require a replacement part. Instead tighten gas spring additional rotation until the backrest easily reclines.

Warranty: Eidos products are covered by a limited warranty for a period of five years from date of purchase.

**\*Online Backrest Video:**

[https://www.youtube.com/watch?v=DUrJdMXa\\_tY](https://www.youtube.com/watch?v=DUrJdMXa_tY)