


Assembly Instructions

Tools Needed: 1/4" wrench or socket

Please read all instructions before assembling


Step 1: Attach toolbox to side mount bracket with the two 1/4" x .20 x 1/2" bolts and 1/4" nuts. (They are shipped attached to the toolbox). Tighten with 1/4" wrench or socket.

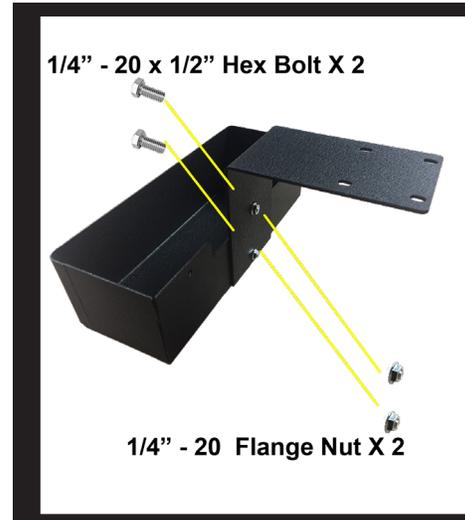

Step 2: Attach Toolbox and Side mount to seat. Align 4 hole pattern from side mount to seat and tighten 1/4" bolts with 1/4" wrench or socket.

Step 3: The Model 106 standpipe collar placement will determine the overall seat height. The higher the collar is placed on the standpipe, the lower the seat height and vice versa. Note: 7.5" measured from the bottom of the standpipe to the top lip of the collar is the lowest position ensuring the standpipe will not touch the ground.

Do not apply weight until the desired position has been configured.

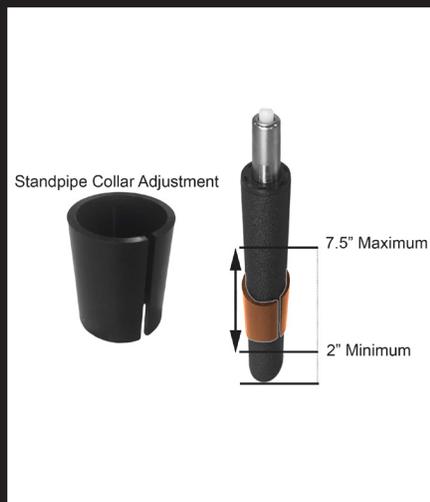

Warranty: Eidos products are covered by a limited warranty for a period of five years from date of purchase.

*Online Product Registration :

<http://www.eidosergonomics.com/product-registration.html>


Continued on back






Step 3: Place the round, contour or wide-profile seat onto the gas spring.

Step 4: Place the standpipe and collar into the pan by holding the top of the collar (minimize vertical movement of collar) apply pressure downward.

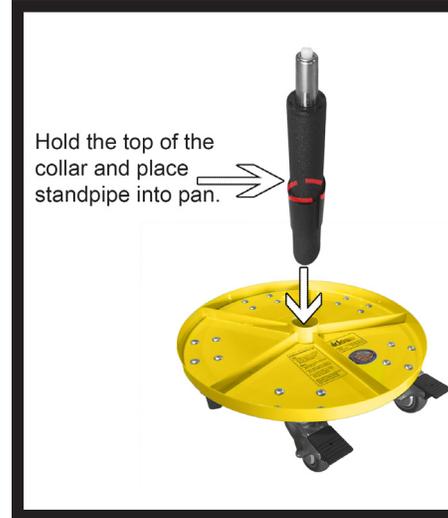

Step 4: Apply weight and enjoy your Eidos Ergonomics Model 106.

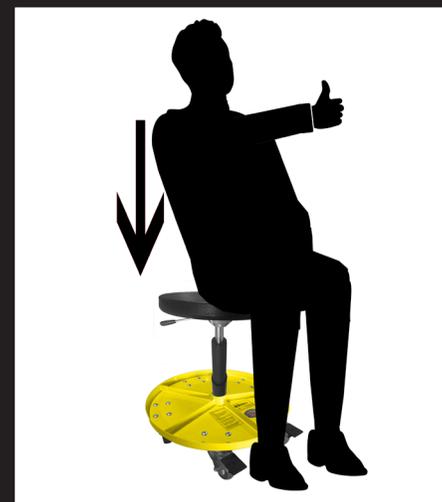

Warranty: Eidos products are covered by a limited warranty for a period of five years from date of purchase.

**Online Product Registration :*

<http://www.eidosergonomics.com/product-registration.html>